


MAGNI UNITY

**MODULAR HEADPHONE
AMP & PREAMP**

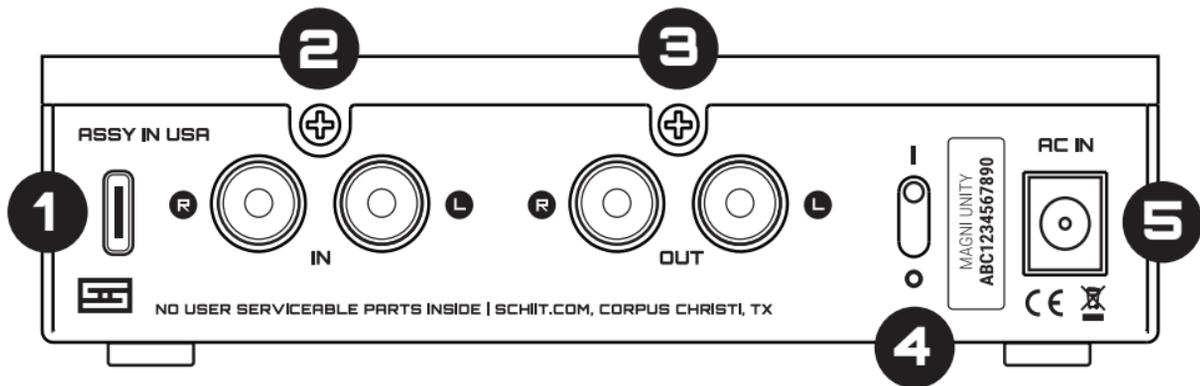

CONNECTIONS

1 USB Input. If you have the optional DAC card, connect your source via USB-C here. Unison USB™ works with Windows 10/11, MacOS, iOS, Android, and Linux distros that support UAC2.

2 Analog RCA Input. Connect an analog source to the Magni's "IN" RCA jacks with high-quality RCA cables.

3 Preamp Outputs. If you have a speaker power amp or powered monitors, connect them here. This allows you to use the Magni as a preamp and volume control.

4 Power switch. Up for on. Down for off. Simple as that. The protection relay mutes the output for about 10 seconds, then engages with a click.

5 AC Input. Connect the supplied wall-wart cable to the jack labeled "AC IN." Do not use any other wall-wart, or Magni will not work.*

*Magni's wall-wart is AC output. Most AC adapters are DC output, and will not work with Magni. Magni works with a 14-16VAC, 1-2A output adapter only.

1 Headphone Jack. Connect your headphones here. For smaller plugs, you may need a 1/8" to 1/4" adapter (not supplied).

2 Volume Control. Turn the knob to adjust both the headphone and preamp outputs.

3 Gain Switch. Magni has three gain settings, +15dB (high), 0dB (low) and -10dB (negative). Low gain and negative gain give you more volume range for sensitive headphones.

4 Input Switch. Up for DAC, down for RCA. If you don't have a DAC card, you won't get output with the switch up.


Remember, when you plug headphones into Magni, it mutes the preamp output.

OVERCURRENT PROTECTION

If your Magni clicks and mutes over and over, it is protecting itself. This is usually caused by a TRRS headphone plug, shorted headphone cable, or other problems.*

Check your system, try different headphones and adapters, and learn more about TRRS problems at schitt.com/trrs

*In extreme cases, at very high volume, you may run into overload, especially with equalization. This is ridiculously loud and dangerous to your hearing.

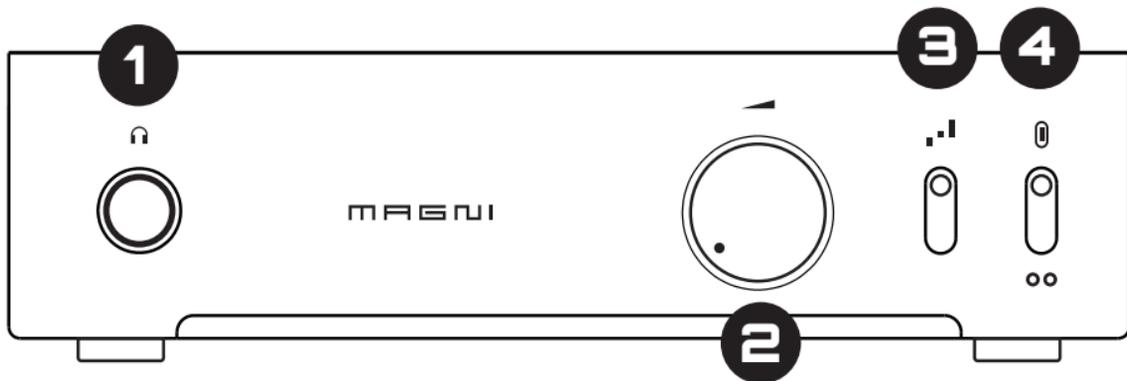

(1) Magni
(1) Wall-Wart
16VAC, 1A

(And maybe some stickers, and the appreciation of the production, QC, and engineering staff at Schiit Audio in Texas and California.)



1. If you don't know how to install audio devices, get a qualified professional to help.
2. Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.
3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.
4. Use only the supplied wall-wart or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the wall-wart from the outlet if the apparatus is unused for a long period of time.
5. To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for three (3) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schiiit.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.



This product is in compliance with standards and regulations of the European Community.

SCHIIT.COM
INFO@SCHIIT.COM

