


EE001

D/A CONVERTER

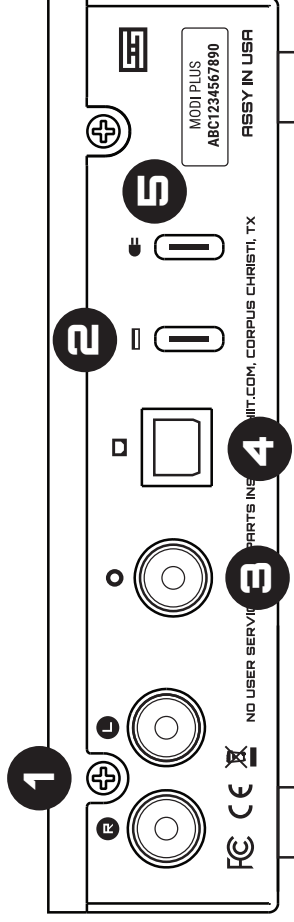

CONNECTIONS

1 Connect the two RCA jacks to your amp, preamp, or receiver.

2 Connect a USB source using a USB A-C cable (supplied). If you're using a USB source, this may be the only input you need.

3 (Optional) Connect a coaxial digital source to the coaxial input, using an RCA cable, 75 ohm preferred.

4 (Optional) Connect an optical source to the optical input jack, using a Toslink cable.

5 (Optional) Connect a 5V power source to the power input if you need external power—see below.

If you're using Modii+ as a USB only DAC, you don't need Power Input. Just connect it to your computer and you're set.

If you're using the other digital inputs, and you're NOT using USB, you need Power Input. Connect the USB wall-wart with the supplied USB A-C cable to provide power for the other inputs.


USING MODI+

- 1 Select input by pressing the input button.**
This selects from three inputs—USB, optical, and coaxial. Keep pressing and it will cycle back around thru the inputs.
- 2 When lit, the Unison USB™ input is selected.** This is good for computers, tablets, streamers, and phones.
- 3 When lit, the Optical (Toslink style) input is selected.** Typically used with TVs.
- 4 When lit, the Coaxial input is selected.**
Used with some CD players and transports.

TROUBLESHOOTING

"Draws too much power" error? Disconnect Modi+ from USB, then connect the wall-wart to the Power Input. Modi+ will then report as a 0mA USB device. You'll need another USB cable to connect to your source.

No sound? Make sure you have the correct output device selected on your device. For computers, you may need to select Modi+ in both Control Panel (Windows) or System Prefs (Mac) AND in your player software or streaming service interface.

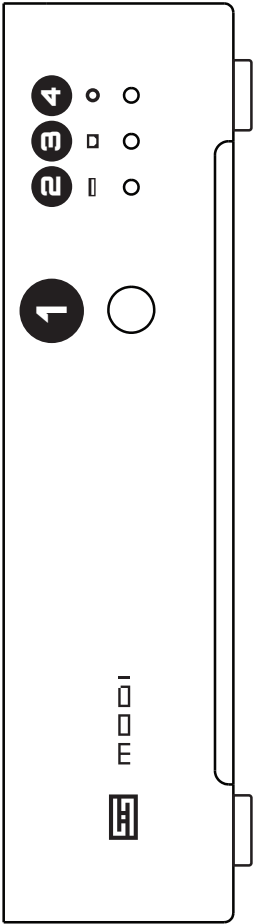

IN THE BOX

- (1) Modi
- (1) 5V USB
- Wall-Wart
- (1) USB A-C
- Cable

(And maybe some stickers, and the appreciation of the production, QC, and engineering staff at Schitt in Texas and California.)

SAFETY



1. If you don't know how to install audio devices, get a qualified professional to help.
2. Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.
3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.
4. Use only the supplied wall-wart or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the wall-wart from the outlet if the apparatus is unused for a long period of time.
5. To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARRANTY

Schitt Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schitt Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schitt Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schitt.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schitt Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.



This product is in compliance with standards and regulations of the European Community.



SCHITT.COM
INFO@SCHITT.COM